ARAT Telephone mount

Car manufacturer: **Chrysler**

Type: **Grand Cherokee Jeep (model 1999 onwards)**

Part No: **1094.3**

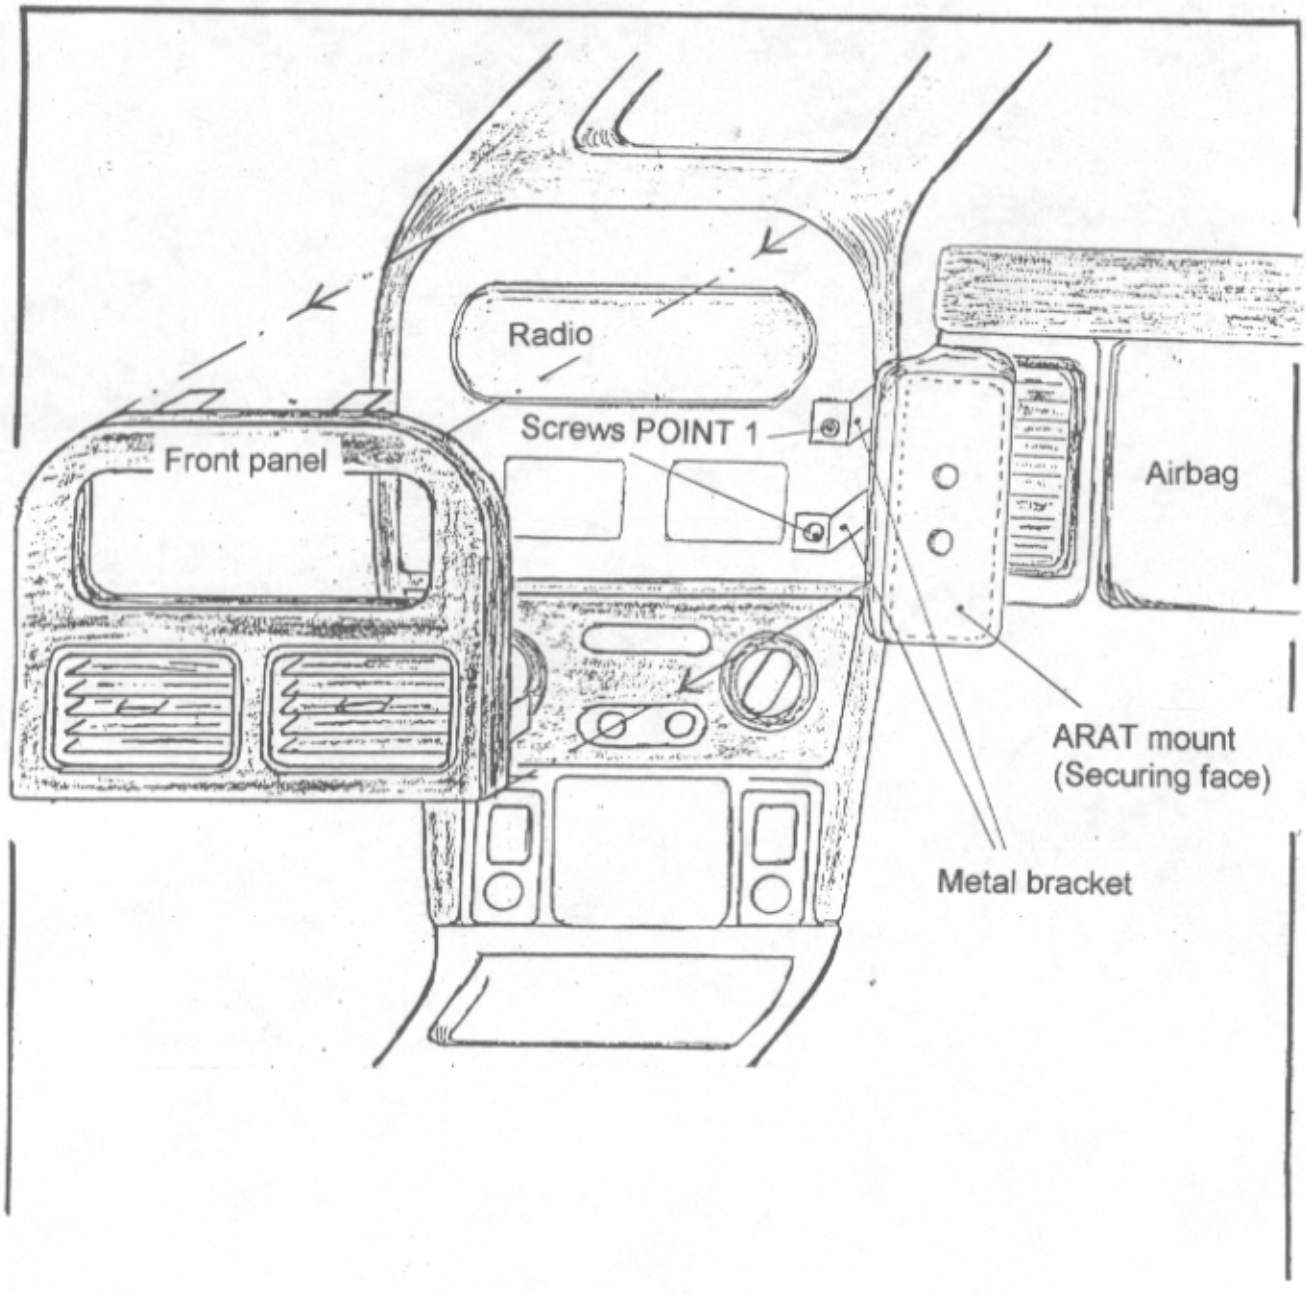

Installation instruction

Remove the front panel from its spring clips, and remove the screws at POINT 1
Place the ARAT mount to the contours of the dashboard and screw the previously removed screws from POINT 1 through the metal bracket of the mount, replace the front panel

Note:
The metal plate that lies beneath the securing face of the mount must be pre-drilled to secure the telephone holder